


# Reveal<sup>®</sup> Service Counter Design Guide



P/N 21-21126

REVEAL<sup>®</sup> MODEL NE(L)(H)HSV HEATED SERVICE CASES WITH REAR SLIDING DOORS


**Important! See Page 3 For Structural Support Warning, Model Applicability & Other Critical Design Guide Notes.**

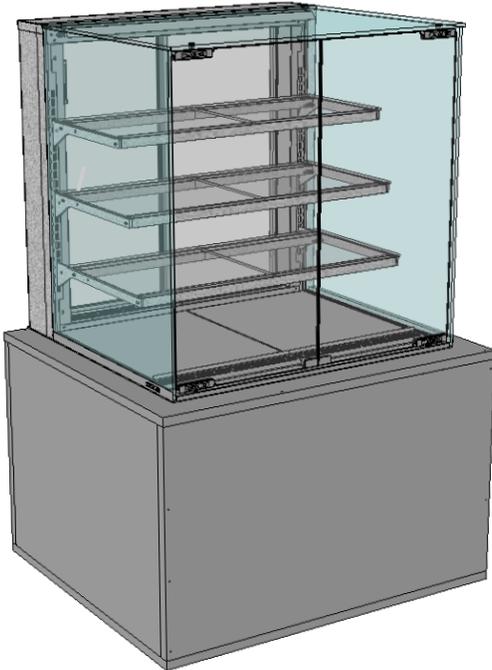

← Front and Rear Views of Model NE3635HSV Shown In Randomly-Sized Service Counters (For Illustrative Purposes Only). →

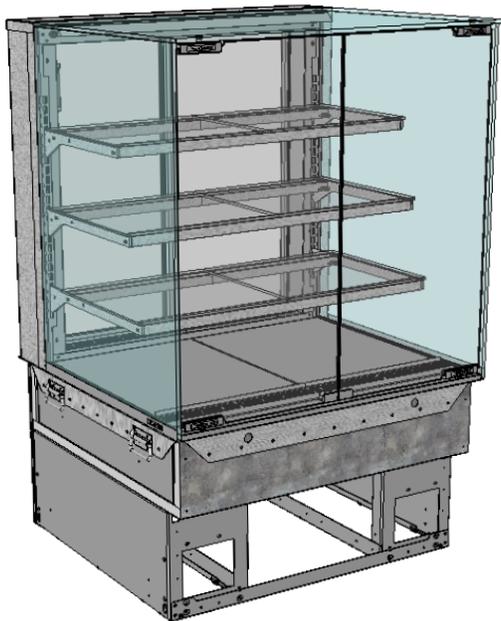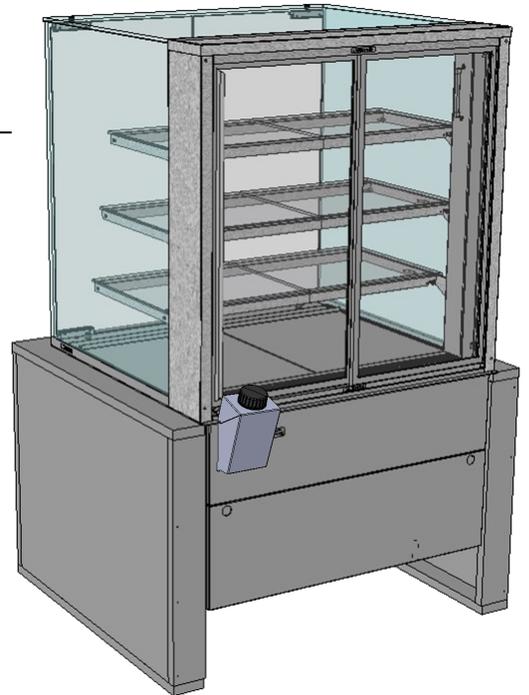

← Front and Rear Views of Model NE3635HSV Shown Prior To Being Slid Into Service Counters (For Illustrative Purposes Only). →

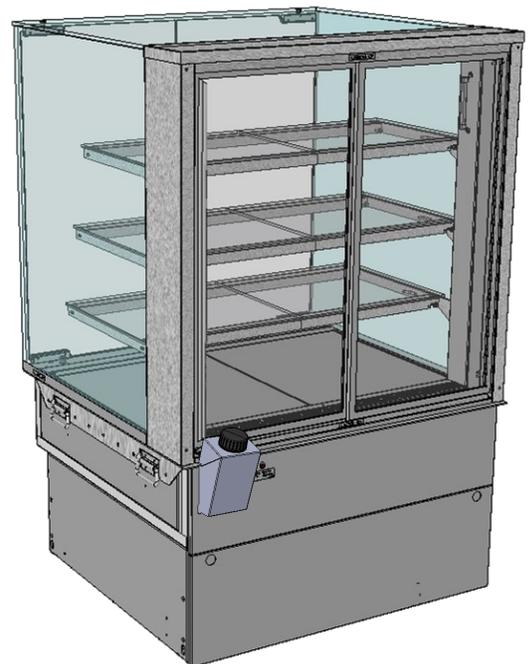

**See P/N 21-20981 For User Manual.**

## Structural Concepts<sup>®</sup>

DELIVERING FRESH. ALWAYS.<sup>™</sup> Structural Concepts Corp. · 888 E. Porter Rd · Muskegon, MI 49441 Phone: 231.798.8888 Fax: 231.798.4960 · www.structuralconcepts.com

**TABLE OF CONTENTS**

<b>TABLE OF CONTENTS .....</b>	<b>2</b>
<b>STRUCTURAL SUPPORT WARNING / MODEL APPLICABILITY &amp; DIMENSIONS / SERVICE COUNTER DESIGN GUIDE NOTES .....</b>	<b>3</b>
<b>SERVICE TOP CUTOUT DIMENSIONS / MINIMUM COUNTER SURFACE REQUIREMENTS - CASE FRONT VIEW .....</b>	<b>4</b>
<b>SERVICE TOP CUTOUT DIMENSIONS / MINIMUM COUNTER SURFACE REQUIREMENTS - CASE REAR VIEW .....</b>	<b>5</b>

# **STRUCTURAL SUPPORT WARNING**

**CABINET MUST BE CONSTRUCTED TO HOLD THE WEIGHT OF THE CASE. CASE IS SUPPORTED ON THREE SIDES (FRONT/LEFT/RIGHT) BY A TRIM RING.**

## **Model Applicability & Dimensions**

<b>Model</b>	<b>Upper Display Height</b>	<b>Overall Height</b>	<b>Case Depth x Length</b>
NE3613HSV	13 5/8"UDH	32 7/8"OH	33"D x 35 3/4"L
NE3620HSV	20 3/8"UDH	39 5/8"OH	33"D x 35 3/4"L
NE3627HSV	27 7/8"UDH	47 1/8"OH	33"D x 35 3/4"L
NE3635HSV	35 1/4"UDH	54 5/8"OH	33"D x 35 3/4"L
NE4813HSV	13 5/8"UDH	32 7/8"OH	33"D x 47 3/4"L
NE4820HSV	20 3/8"UDH	39 5/8"OH	33"D x 47 3/4"L
NE4827HSV	27 7/8"UDH	47 1/8"OH	33"D x 47 3/4"L
NE4835HSV	35 1/4"UDH	54 5/8"OH	33"D x 47 3/4"L


## **Service Counter Design Guide Notes**

1. This guide applies to Models NE(L)(H)HSV. See Model Applicability & Dimensions chart (above) for specific models.
2. This guide does NOT cover every possible installation scenario.
3. SCC is not responsible for incorrect designs or installations.
4. Contact SCC Technical Support with questions.
5. See SCC Installation & Operating Manual P/N 21-20981 (which should accompany this guide) for additional information about these cases, including how to access the optional humidification system as well as overflow systems.

**SERVICE TOP CUTOUT DIMENSIONS / MIN. COUNTER SURFACE REQUIREMENTS - CASE FRONT VIEW**

SERVICE TOP CUTOUT DIMENSIONS		
MODELS	A*	B**
NE3613HSV	1 1/2" MINIMUM	35"
NE3620HSV	1 1/2" MINIMUM	35"
NE3627HSV	1 1/2" MINIMUM	35"
NE3635HSV	1 1/2" MINIMUM	35"
NE4813HSV	1 1/2" MINIMUM	47"
NE4820HSV	1 1/2" MINIMUM	47"
NE4827HSV	1 1/2" MINIMUM	47"
NE4835HSV	1 1/2" MINIMUM	47"

\* 1 1/2" MINIMUM FROM OUTSIDE EDGE OF COUNTER SURFACE TO CUTOUT  
 \*\* COUNTER SURFACE CUTOUT WIDTH

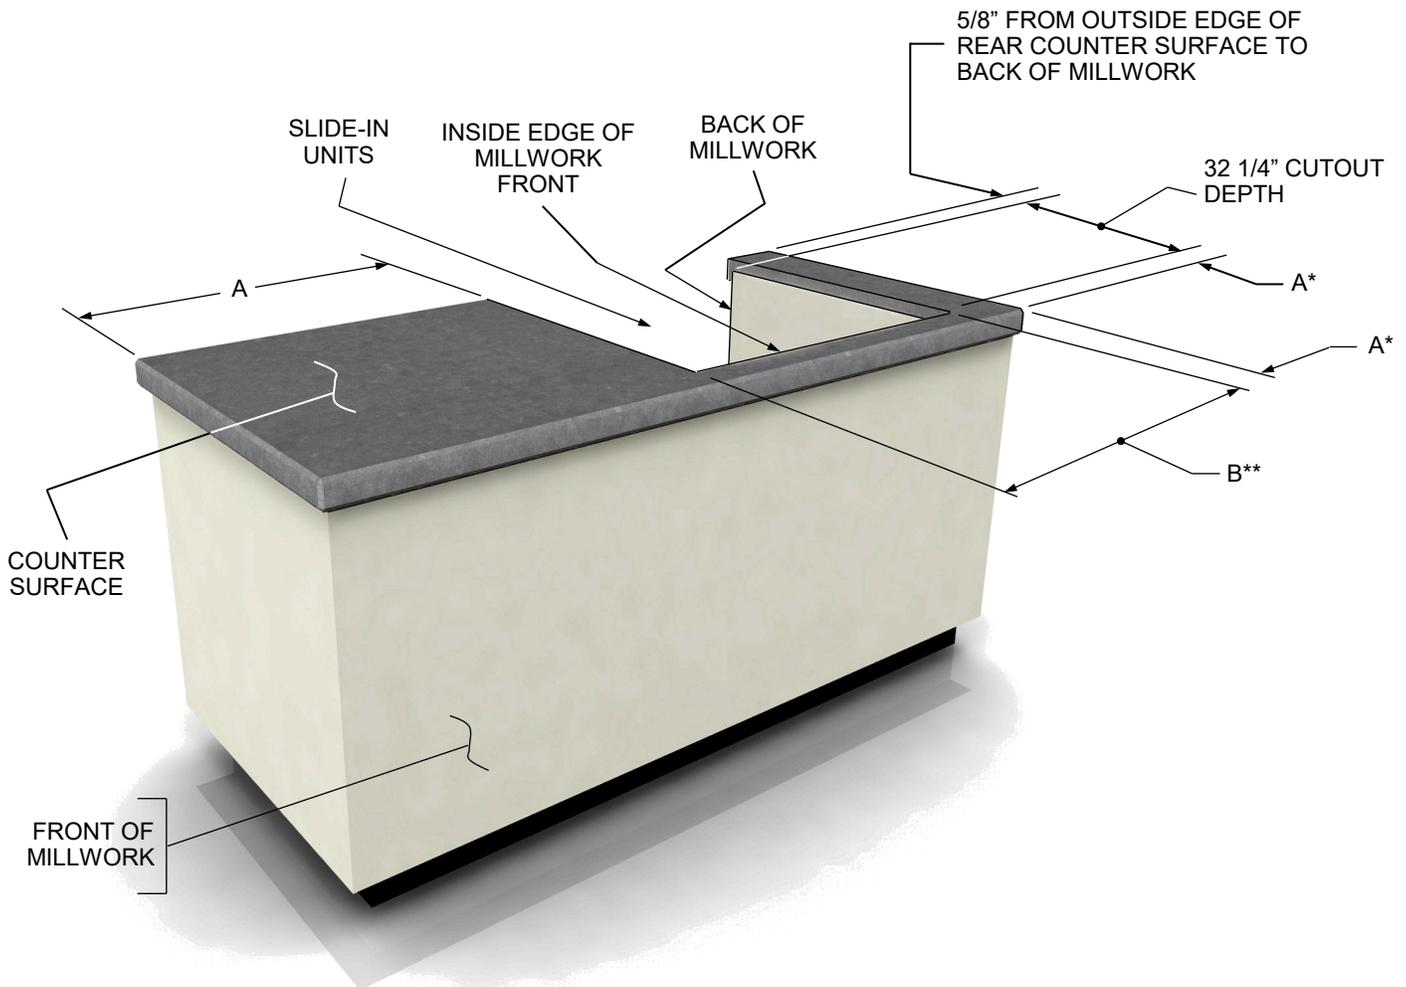


*--- Service Top Slide-In Unit Dimensions ---*

**SERVICE TOP CUTOUT DIMENSIONS / MIN. COUNTER SURFACE REQUIREMENTS - CASE REAR VIEW**

**SERVICE TOP MINIMUM COUNTER SURFACE & CUTOUT DIMENSION REQUIREMENTS**

MODELS	A*	B**
NE3613HSV	1 1/2" MINIMUM	35"
NE3620HSV	1 1/2" MINIMUM	35"
NE3627HSV	1 1/2" MINIMUM	35"
NE3635HSV	1 1/2" MINIMUM	35"
NE4813HSV	1 1/2" MINIMUM	47"
NE4820HSV	1 1/2" MINIMUM	47"
NE4827HSV	1 1/2" MINIMUM	47"
NE4835HSV	1 1/2" MINIMUM	47"

\* 1 1/2" MINIMUM FROM OUTSIDE EDGE OF COUNTER SURFACE TO CUTOUT  
 \*\* COUNTER SURFACE CUTOUT WIDTH

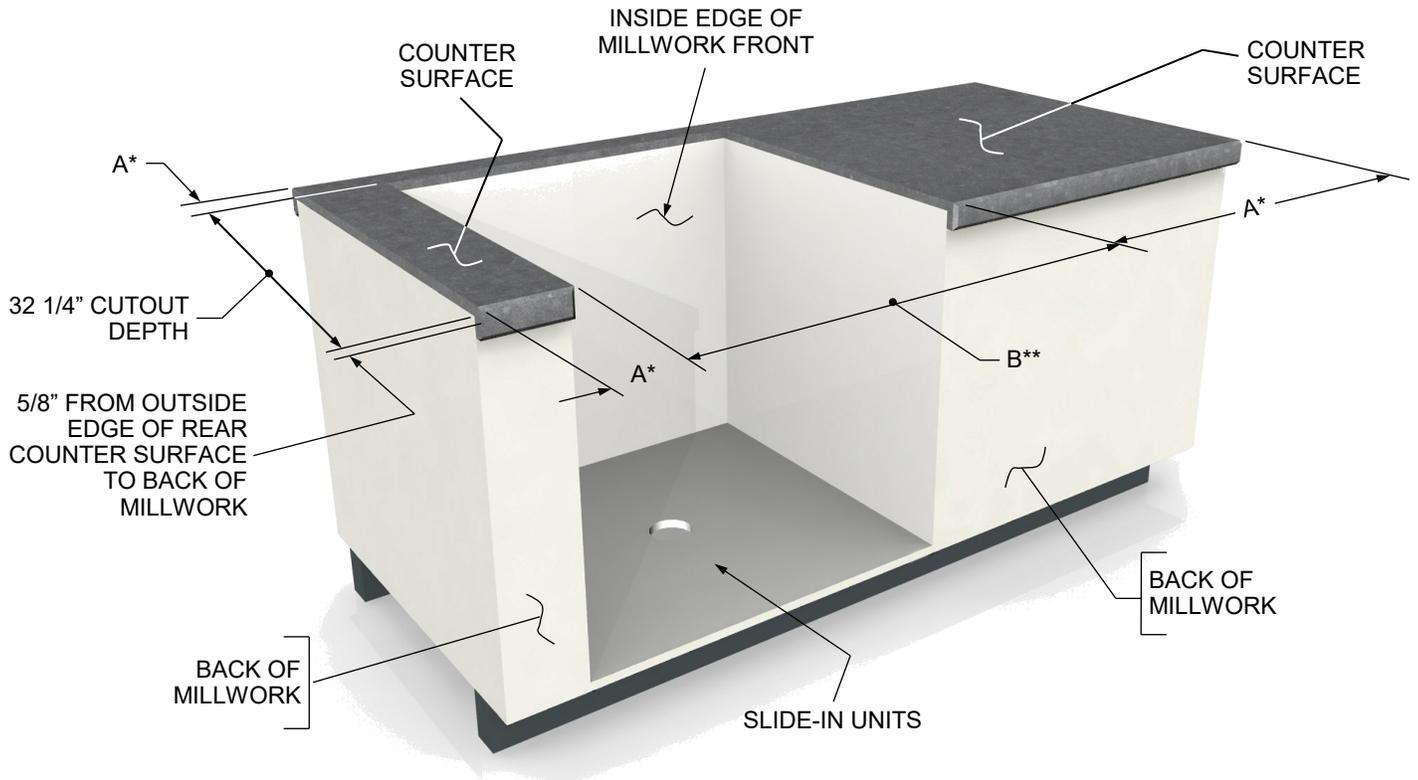

*--- Service Top Slide-In Unit Dimensions ---*